


SAPO[®] Solutions

Adjustment of Lube Lines - Manual

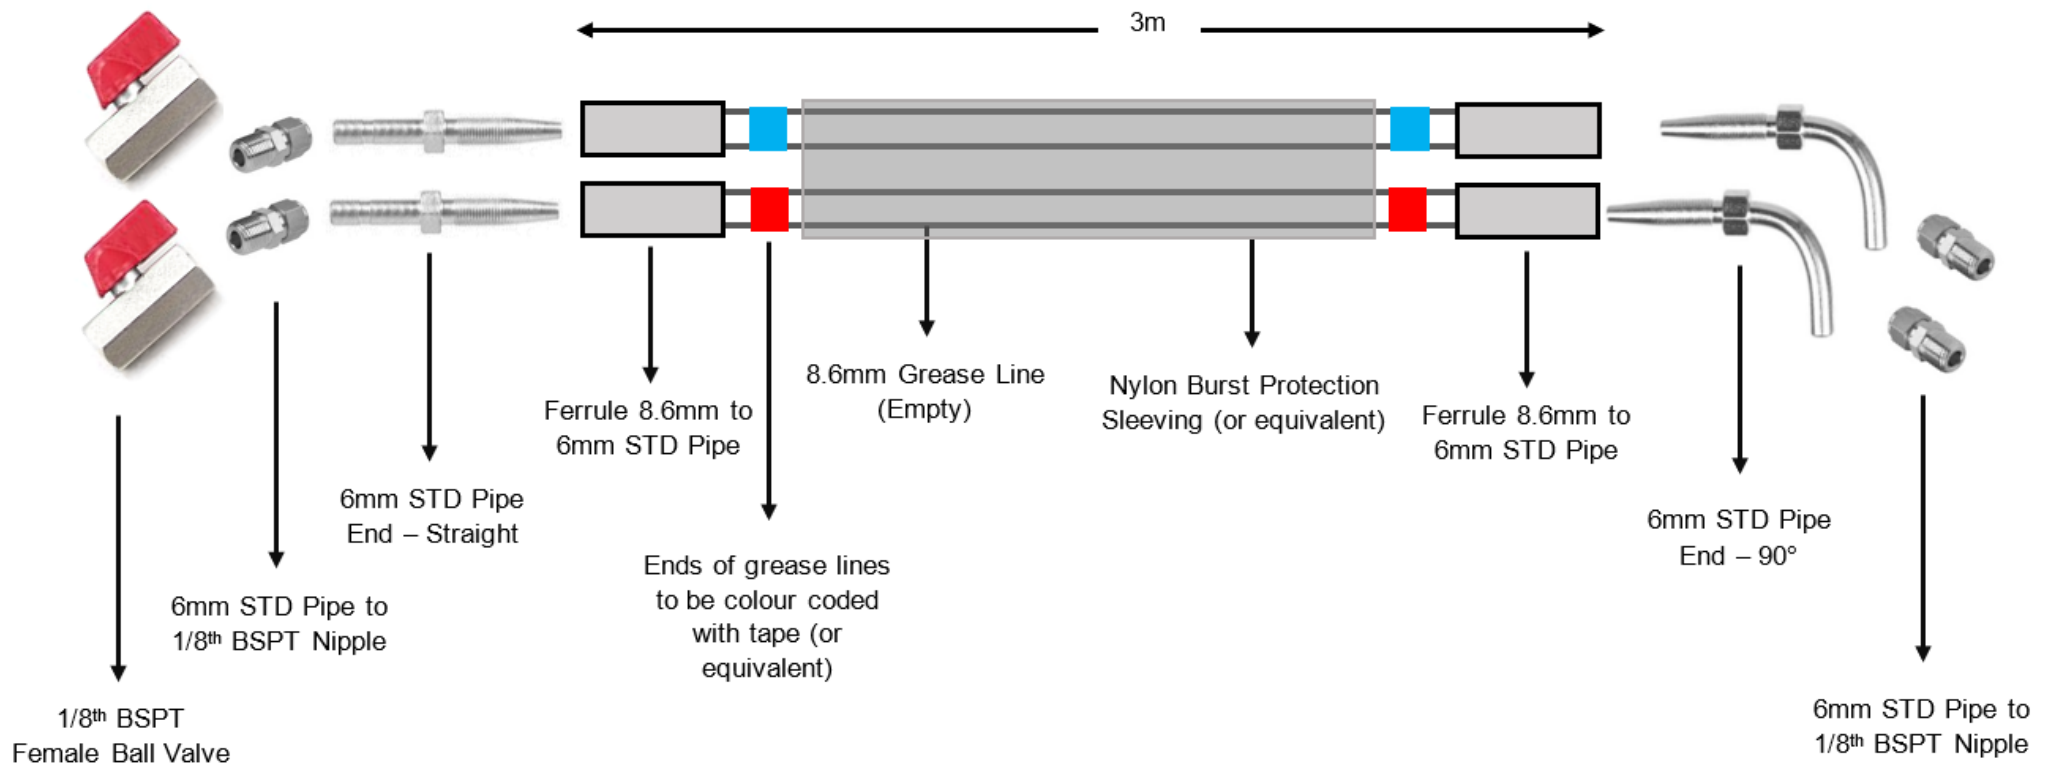

Required Tooling:



12mm Spanner

10mm Spanner

Pilers or Vice


Snips

Coloured Tape (desirable)

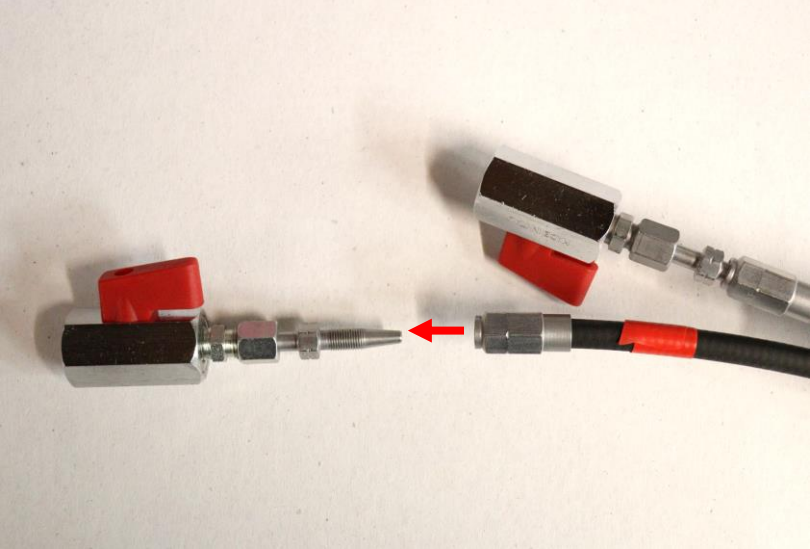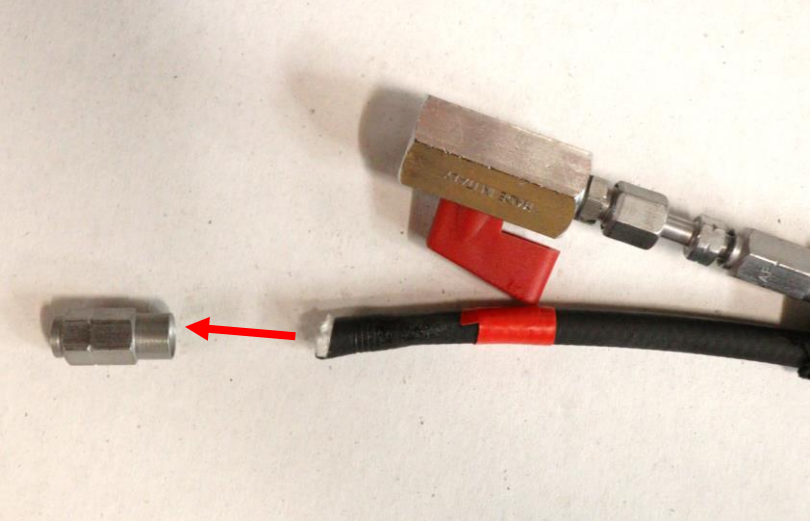INSTRUCTIONS:	Tooling:	PHOTO:
Unscrew STD Pipe Hose Tail from Ferrule fitting.	10mm spanner 12mm spanner	
Unscrew Ferrule from hose (left-hand thread), supporting hose with pilers or vice.	12mm spanner Pilers/vice	

Cut hose to desired length & attach new tape for identification.

Snips
Tape

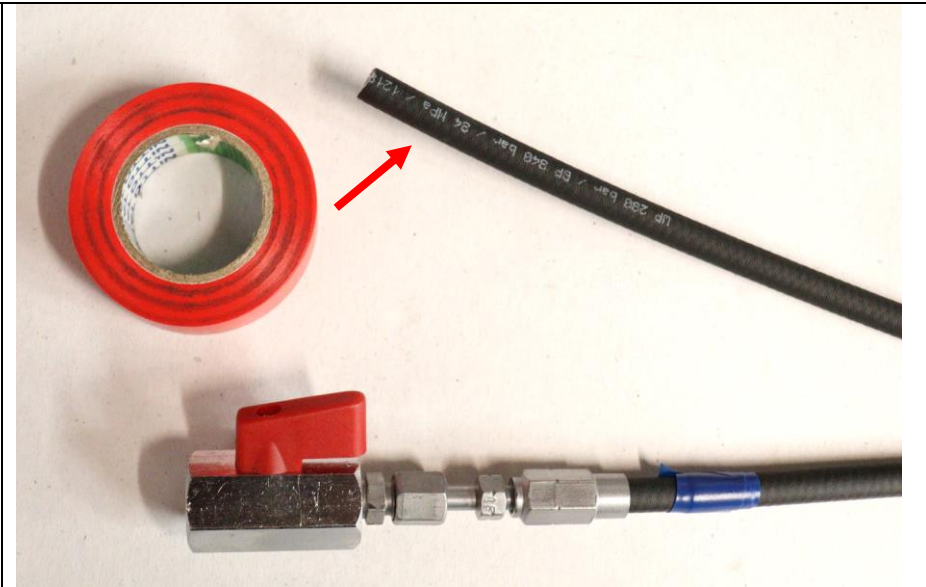

Installation is the opposite of removal:

- Attach ferrule to hose – tighten until hose is about to touch the right-handed thread (pictured);
- Screw STD Pipe Hose Tail from Ferrule fitting.

10mm spanner
12mm spanner
Pilers/vice



For troubleshooting, please contact DASH Engineering:

T: +61 8 6162 0990

E-mail: info@dashengineering.com.au

or visit saposeal.com